


TW2000 P-Q performance curve

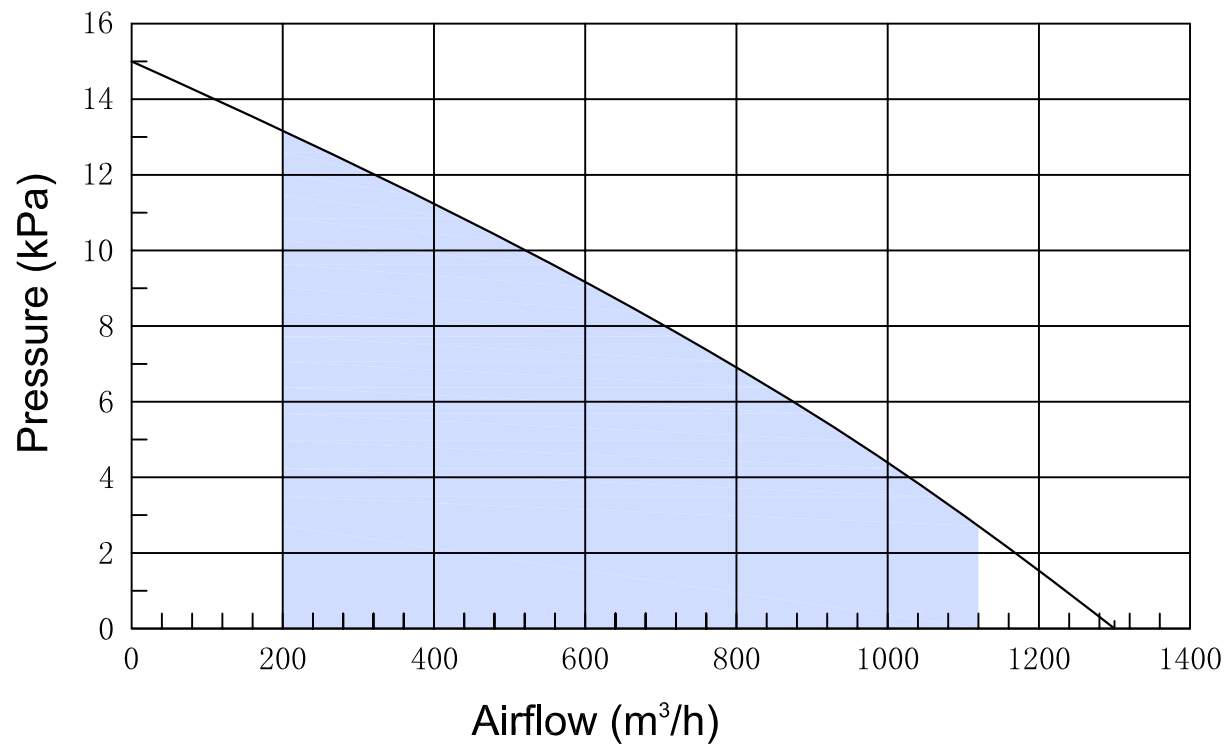

The filling area is the effective working area.